


QBlade Self-Test Module

CODE: QBLADE-ST-MOD



Enable Self-Testing

This module simply clips onto the QBlade's built-in connector panel to allow self-test functionality instead of manual.

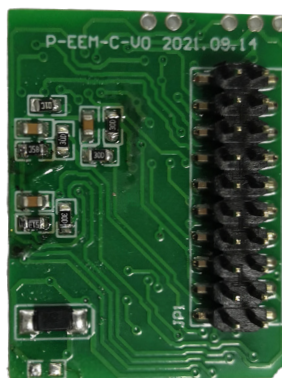

Technical

Installation	Clip Onto QBLADE's Built-In Connectors
Testing Type	Self-Test
Operation	Plug & Play [See Below]

Installation

