


SpecLine

Suspension Kit

CODE: SPECLINE-SK2



Also Required

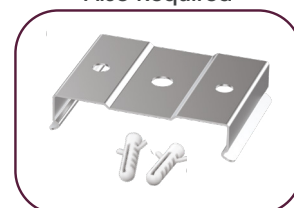

Kit Contents

Hanging Wire System	x2
4mm Round Head Machine Screws	x2

Additional Requirements


Install Shrapnel	x2 [Supplied with SpecLine Luminaire]
Plastic Dowels	x2

Hole Spacing (See Step 2)

Luminaire Length (L)	600mm	1200mm	1500mm	1800mm
Recommended Hole Spacing (D)	330mm	800mm	1000mm	1200mm


Installation (Suspension)

Step 1

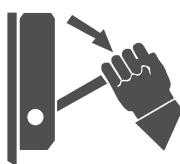

Make sure power is turned off before you begin the install.

Step 2

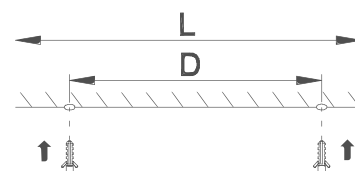


Punch 2 holes of 6mm in the ceiling and plug the plastic dowel into the hole.


SpecLine

Suspension Kit

CODE: SPECLINE-SK2

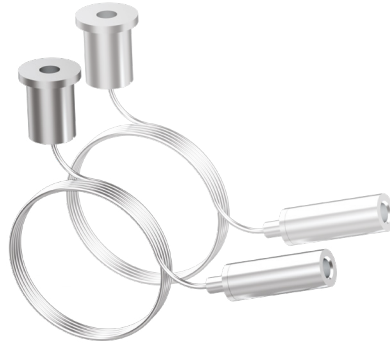


Step 3

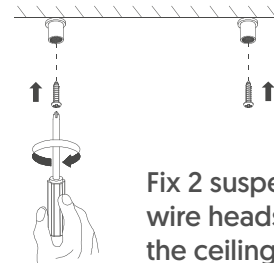


Fix 2 suspension wire heads into the ceiling.

Step 4

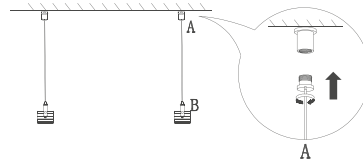


Fix the wire rop to the suspension wire heads (fig. A) and fasten the install shrapnel to the wire lock (fig. B).

Step 5

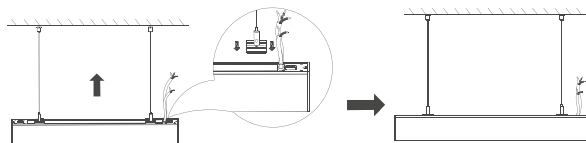


Snap the install shrapnel (on the suspension wire) to the profile of the luminaire.

Step 6

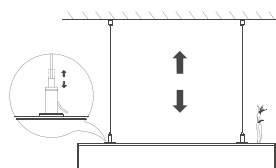

The hoisting height of the luminaire can be controlled by adjusting the steel cable.

Step 7

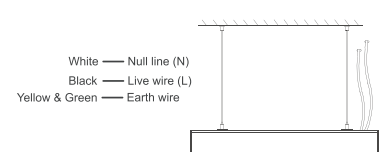


Connect the dimming line to the lead of the dimmer. After this, connect the luminaire input line to the mains electricity.*

Step 8



Install the lens after the luminaire is fixed in place.

Step 9

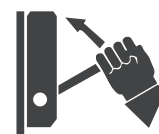

Turn on the switch in order to test that the fitting works correctly.